


DataTronix

Large Button Remote for AEP2 Set-Top Boxes and H26K Receivers User Manual

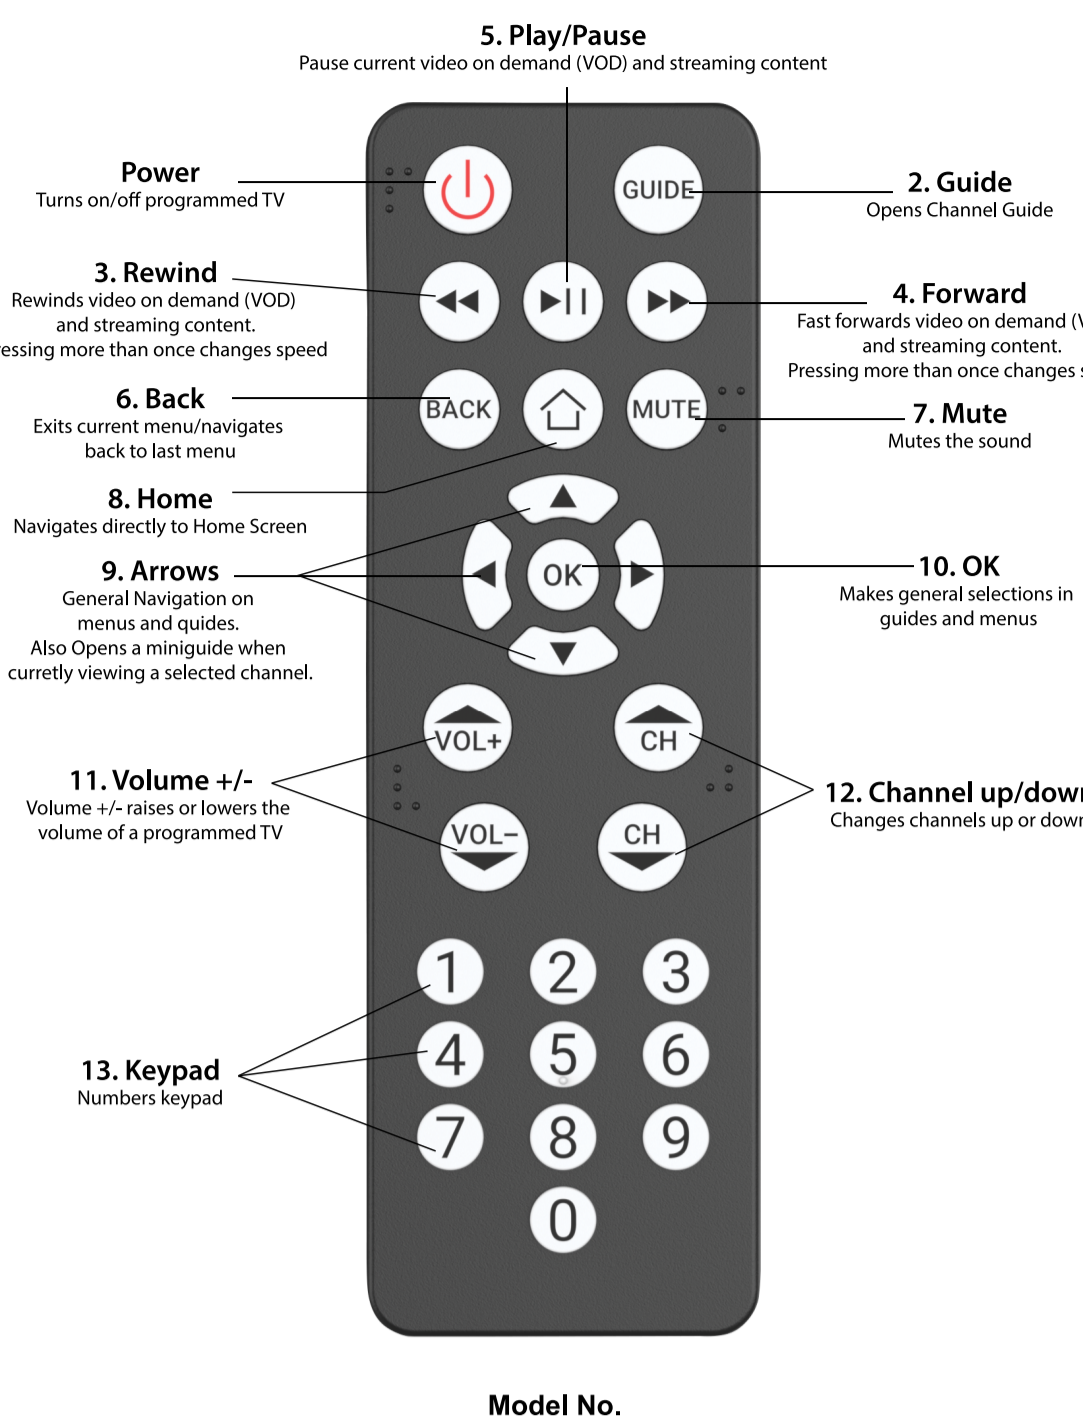

Step 1: Install your batteries

- To install the batteries:**
- Remove the battery compartment cover.
 - Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
 - Push the battery cover back into place.

Battery Failure Indication:

1. If the battery voltage is low and needs to be replaced, the light will blink 10 times.

Step 2 Program TV Instructions

- Simultaneously press the OK and MUTE buttons until the red light is solid.
- Enter the TV code from the included list and press OK to confirm.
- Test the correct code was used by pressing volume up/down and listen for a change in the TV volume. If there is no change in the TV volume, use a different code.

Step 3 Factory Reset

- Simultaneously press the HOME and 0 key for 4 seconds.
- When the LED blinks 5 times they remote control has been factory reset.

A.MARK	1112 1143
A.R SYSTEMS	0160
ACCURIAN	1036
ACER	0746 0640
AD NOTAM	
ADL	0204 0157
ADMIRAL	0157 0204 0137 0058 1072 1251 1332
ADVENT	1247 1388
ADVENTURA	1002
ADYSON	0219 0159
AEG	0842 0759 0673 0652 0643 0642 0521 0319
AFFINITY	0286 0282 0263 0110 0109 0031
AG	1680
AG	0282
AGAPHOTO	0679
AH VISIONS	0131
AIOSTAY	0129
AKAI	0842 0638 0636 0548 0517 0287 0280 0279 0275 0155
AKITA	0140 0132 0124 0120 0106 0104 0103 0096 0092 0074 0026 1116
AKURA	0624 0542 0541 0430 0429 0428 0174 0171 0169 0086 0074 0064
ALBA	0713 0307 0262 0202 0175 0172 0124 0074 0069 0064 0060 0006
ALBATRON	1017
ALERON	1028
ALIEN	0264
ALLSTAR	0120 0074
ALTVS	0124
AMERICA ACTION	1043
AMPRO	1073
AMSTRAD	0286 0171 0157 0110 0074 0025 1032
ANAMI	0285 1043 1054 1056 1080 1112
ANDERSSON	0110
ANITECH	0277 0232 0219 0185 0120 0074
ANSONIC	0786 0732 0074
ANTECNO	0084
AOC	0568 0016 1116 1363 1112 1616
APEX	1572
APEX DIGITAL	1006 1724
AQUAVISION	1573 1574 1686
ARC EN CIEL	0178 0173
ARCELKJ	0124 0086 0085
ARDEM	0124 0085
ARENA	0124 0006
ARGOS	0124
ARISTONA	0230 0109 0006
ASA	0234 0105 0102 0087
ASBERG	0232 0185
ASORA	0171
ASTAR	1477
ASTRO SOUND	0074
ASUKA	0149
ATLANTIC	0197 0089
AUDIOSONIC	0269 0263 0232 0185 0171 0163 0159 0124 0110 0085 0074
AUDIO VEX	0277 0264 0170 0120 0074 0154
AUROMA	0219 0171 0170
AUTOVOX	0282 0197 0163 0159 0129 0110
AVENTURA	1052
AVERA	1461
AVION	1781
AVTEX	0830
AWA	0074
AWATRON	0074
AXESS	1711
AXION	1039
AXION	0726 0724 0688 0628 0546
BAIER	0751
BAIRD	0750 0733 0578 0524 0188 0014
BANG & OLUFSEN	1333 1024
BASIC LINE	0277 0264 0170 0120 0074 0154
BAUR	0233 0217 0212 0211 0171 0132 0131 0120 0096
BEKO	0690 0510 0263 0255 0225 0195 0130 0124 0110 0086 0085 0026
BELCOR	1116
BELL&HOWELL	1333 1072
BELSTAR	0110
BENS	1600
BENSON	0282
BESTAR	0086 0074
BLACK DIAMOND	0120 0074
BLACK PANTHER	0185
BLAUPUNKT	0528 0096 0092 0091 0006
BLUE SKY	0286 0282 0273 0264 0172 0124 0109
BLUESTAR	0074 0063
BLUSENS	0787 0654 0611

BOMANN	0282
BONDSTEC	1257
BRADFORD	0143
BRANDT	0270 0195 0193 0178 0173
BRIONVEGA	0204 0157
BROCKWOOD	1116
BROKSONIC	0285
BRUNS	0204
BSR	0129
BUSH	0836 0766 0725 0568 0501 0314 0303 0287 0286
BYDESIGN	0283 0264 0232 0202 0129 0124 0115 0110 0074 0069 0063 0031
BYEISSON	1031 1032
CAMPER	0086
CANDLE	1116 1002 1003 1363
CELEBRITY	1001
CELLO	0536 0434 0318 0315 0312 0311 0310 0301
CENTURION	1116
CENTURY	0204 0165
CETRONIC	1043
COE	0260 0232 0185 0129
COLEMAN	0264 0086 0089 0074
CHANGHONG	0717 1247
CIE	0171 0170 0163 0074 0064 0025
CIELO	1714
CIIL	1732
CINERAL	0272
CINEX	0294 0031
CITIZEN	1116 1002 1003 1363 1043 1258 1143
CLARION	0258 0232 0161
CLARVOX	1043
CLASSIC	1043
CLATRONIC	0742 0294 0286 0282 0260 0255 0232 0185 0171
CLP CLASSIC	0165 0159 0149 0129 0124 0110 0074 0064
CMX	1333
COBY	0770 0763 0591 0589
COLORTYME	1640 1641 1671 1363
CONCERTO	1363
CONCIERGE	1073
CONDOR	0260 0255 0232 0229 0171 0149 0109
CONIC	0219
CONTRAC	0225
CONTEC	0277 0171 1043 1050 1051
CONTI	0263 0124
CONTINENTAL	0232 0204 0165 0148 1164
CONTINENTAL EDISON	0193 0178 0173 0172
CONTINU-US	1161 1746 1747
CORNEA	1116
CORONADO	1143
COSMOS	0074
CRAIG	1043 1054
CROSBLEY	0232 0204 0165 0148 1164
CROWN	0764 0286 0282 0274 0264 0263 0255 0232 0185
CROWN	0171 0129 0124 0086 0085 0074 0063 1043 1143
CS-ELECTRONICS	0163 0159 0064
CURTIS	0260 0074
CURTIS MATHES	1116 1258 1363 1143
CXC	1043
CYBERHOME	1015
DAEWOO	0720 0598 0540 0519 0431 0269 0170 0120 0074 1363
DANSI	1043 1078 1143 1043 0219
DANTAX	0124 0074
DAYTEK	0194
DAYTRON	1363
DE GRAAF	0132
DECCA	0189 0184 0161 0159 0128 0074 0069 0066 0063
DELL	1320 1164 1363 1618
DELTA	0074
DENVER	0638 0625 0596 0527 0282 0171 0074 0064
DESMET	0074
DGM	0543 0426
DIBOSS	0621
DIGIFUSION	0225
DIGINUM	0031
DIGITREX	0586
DIGIX	0167
DIMENSIA	1333
DISNEY	0062
DMTECH	0653 0529 0320 0308 0304 0286 0074
DOMUS	0074
DUAL	0286 0279 0233 0129 0124 0113 0110 0006
DUKANE	1011
DUMONT	0234 0232 0204 0185 0110 0109 0105 0102 0087 1116 1073 1073
DURABRAND	0282 0074 1052

D-VISION	0074
DWIN	1674
DYNASTY	1043
DYNEX	1400
DYON	0628 0618 0610 0531
ECS	0751 0124 0110 0069
EDISON	0172
EDISON MINERVA	0172
EIKI	1187
ELBE	0273 0229 0209 0185 0160 0157 0129 0120 0074 0058
ELBIT	0110
ELCIT	0163
ELECTRIC	0109
ELECTRIC CO	0174
ELECTROBAND	1001
ELECTROGRAPH	1466
ELECTROHOME	1143 1024 1076
ELEKTA	0171 0159 0129 0074
ELEKTRA	1072
ELEKTRONIKA	0274 0110 0086
ELEMENT	1363 1494 1526 1622 1690
ELEMIS	0294 0282 0074 0314
ELIN	0132 0087 0074
ELITE	0467 0149 0064
ELMAN	0185 0129
ELTA	0171 0074
E-MAX	0194
EMERSON	0526 0204 0086 0074 1028 1048 1043 1116 1363 1050
ENGEL	1051 1076 1143 1154 1052 1518
ENVISION	1116
EPSON	1324 1590
ESA	1323
ESC	0074
ETRON	0129
EUROLINE	0286
EUROPHON	0165 0161 0160 0159 0129 0014
EUROSKY	0074
EVELUX	0170
EVERVUE	1755
EXPERT (I)	0089
EXQUISIT	0110
F&U	0555
FENNER	0171 0120 0074
FERGUSON	0593 0548 0544 0543 0507 0270 0261 0200 0169
FERGUSON	0198 0185 0162 0160 0075 0014
FIDELIS	0074
FINLANDIA	0195 0189 0105 0104 0014
FINLUX	0290 0279 0276 0275 0234 0229 0225 0189 0161 0159
FINLUX	0140 0129 0128 0120 0110 0107 0105 0104 0103 0102 0087 0074
FIRST LINE	0294 0273 0264 0157 0129 0120 0074
FISHER	0233 0221 0159 0129 0086 0052 0014 1007 1057
FLIT	0273
FORCE	0286 0194 0110
FORMENTI	0229 0159 0149 0110 0109
FRABA	0110
FRONTTECH	0220 0171 0163 0159 0129
FUJITSU	1246 1198
FUJITSU GENERAL	0554 0197 0159 0129 0088
FUNAI	0629 0617 0286 0264 0113 1028 1043 1052
FUTURETECH	1043
GALAXIS	0260 0255 0185 0074
GALAXY	0255
GALERIA	0171
GATEWAY	1242 1268
DECCA	0269 0232 0198 0171 0161 0148 0137
GE	1073 1116 1008 1009 1034 1056 1333 1363
GENCO	0189 0159 0132 0129
GELOSO	0171 0163 0148 0137 0064
GEM	1391
GENERAL	0171
GENERAL TECHN. I	0171
GERICOM	0300 0225 0187
GIBRALTER	1116 1073
GO VIDEO	1026
GO LINK	0264 0074
GOLDLINE	0171 0159
GOLDLINE	0273
GOLDSTAR	0288 0268 0263 0237 0219 0191 0171 0163 0159
GOLDSTAR	0129 0124 0110 0074 0038 1113 1116 1102 1363 1112 1143
GOODING	0172
GOODMANS	0543 0528 021 0316 0306 0305 0287 0286 0285
GOODMANS	0275 0270 0269 0268 0264 0225 0224 0195 0184 0187 0176 0171 0170
GORENJE	0286 0074 0110 0086

GPM	0064
GPX	1674
GRADIENTE	0038
GRAETZ	0263 0172 0148 0132 0124 0074
GRAN PRIX	0791 0734 0696 0294 0031 0006
GRANADA	0270 0224 0208 0195 0189 0184 0167 0159 0140 0132
GRANDIN	0128 0120 0109 0105 0104 0103 0088 0085 0081 0078 0075 0054
GREAT WALL	0074
GRUNDIG	0690 0552 0527 0510 0287 0232 0120 0202 0194 0187
GRUNDEL	0172 0153 0130 0124 0110 0096 0094 0092 0091 0073 0068 0063
GRUNPEL	0785 0732 0543
GRUNPY	1028 1043
H&E	0282
HAIER	0733 0501 0133 1363 1501 1623 1749
HAIR MARK	1363
HANNSPREE	0706 0602 1349 1381
HANSEATIC	0308 0277 0269 0229 0225 0220 0191 0171 0149 0132
HANTAREX	0161
HANTOR	0159
HARLEY DAVIDSON	1028
HARVARD	1043
HARWA	0076
HB	0282
HB INGELN	0172
HCM	0277 0171 0159 0074
HELLO KITTY	1076
HIFIFOX	0178 0173
HIMITSU	1043
HINARI	0224 0171 0129 0074 0064
HISAWA	0273
HISENSE	0129 0451 0828 0813 0798 0527 0597 0551 0302 1419
HIT	0204
HITACHI	0744 0659 0581 0515 0286 0279 0276 0269 0219 0195 0189
HIVISON	0186 0173 0161 0159 0140 0132 0129 0128 0120 0114 0110
HITSU	0273
HL	0195 0120 0074
HOHER	0124 0110 0069
HOSHA	0264
HP	1421
HUMAX	0576 1518
HYPER	0171 0163 0159
HYPER	0264 0263 0162 0124 0118 0113 0074 0069 0064
HYUNDAI	0317 0235 0180 0155 0152
IBERVIAO	0129
ICE	0171 0159 0074 0064
IDEAL	0264
IJOY	0543
ILO	1472 1399
IMPRESAL	0260 0255 0232 0229 0165 0154 0129 0110 0109
INFINITY	1164
INFOCUS	1333 1230 1547 1548 1470 1532 1595 1733 1726
INGELN	0279 0273 0148 0132
INGERSOLL	0171
INITIAL	1282
INNO HIT	0237 0189 0161 0159 0074 0006
INSIGNIA	1350 1400 1052 1164 1403 1454 1457 1604 1617
INTEQ	1073
INTERCORD	0233
INTERFUNK	0285 0255 0178 0165 0148 0137 0132 0120 0074 0067
INTERVISION	0191 0163 0132 0086 0085 0074
IPOSTAR	0171
IRRADIO	0264 0237 0163 0074
IRT	0439 0437 0283
ISKRA	0085
ITC	0159 0129
ITL	0171
ITS	0171 0159 0084
ITT	0578 0288 0148 0140 0132 0124 0110 0031 0014
JANELI	1002
JAY-TECH	0286
JBL	1164
JCB	1001
JCPERNEY	1024 1116 1008 1009 1030 1065 1258 1143 1333 1363
JETPOINT	0224
JMB	0063
JOCEL	0283 0282 0074 0069
JTC	0850 0807 0761
JVC	0604 0588 0575 0278 0169 0120 1038 1034 1001 1210 1581 1639 1668
KAIDO	0129
KAISUI	0280 0273 0074 0006
KAMACROWN	0064

KASCH	0197 0148 0132 0089
KARCHER	0289 0282 0274 0273 0185 0124 0110 0109 0074 0031
KATHREIN	1087
KAWASHO	1116 1011
KEC	1043
KENDO	0273 0270 0229 0157 0137 0124 0074 0060 0006
KENMARK	0831 0803
KENNEDY	0197 0148
KENNETX	0264 0074
KENWOOD	1116 1011
KEYMAT	0235 0207
KIOTO</	